

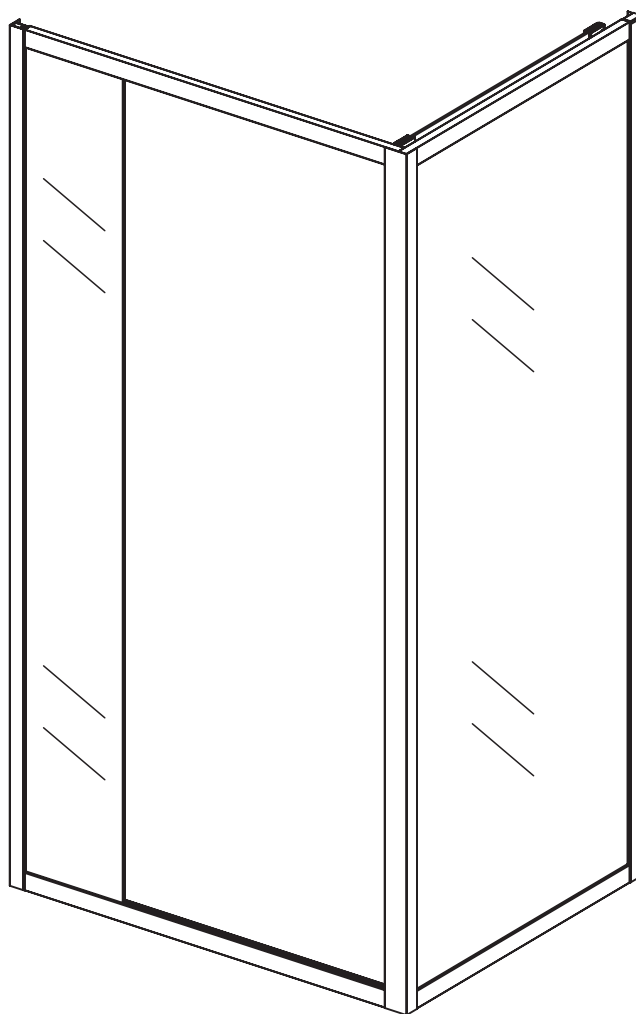







MANUALE INSTALLAZIONE

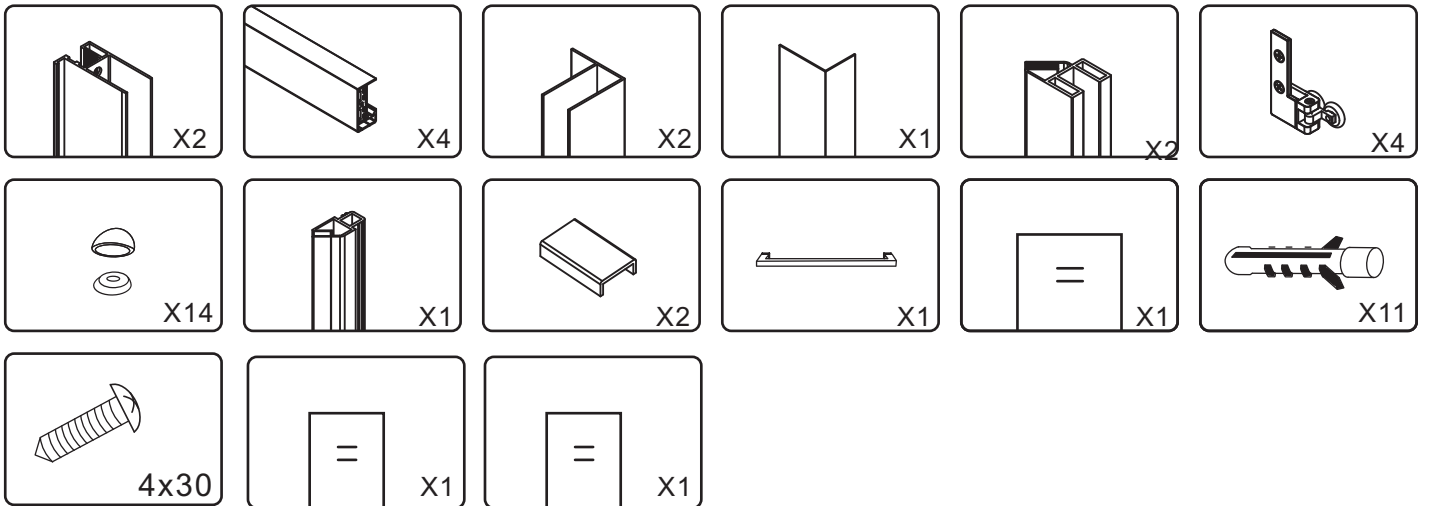


BL-059

CE

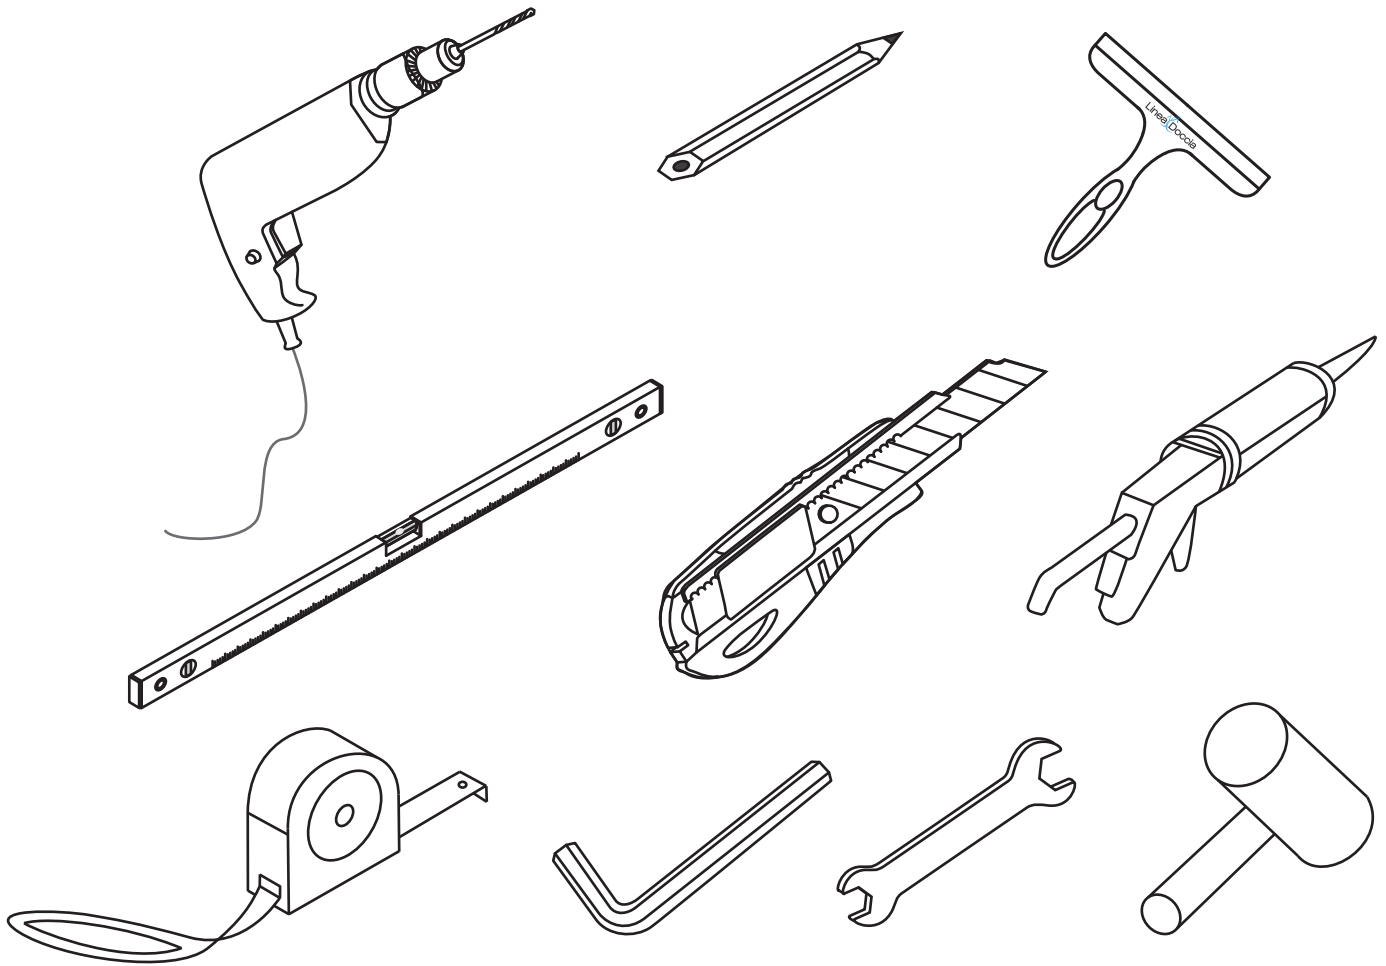


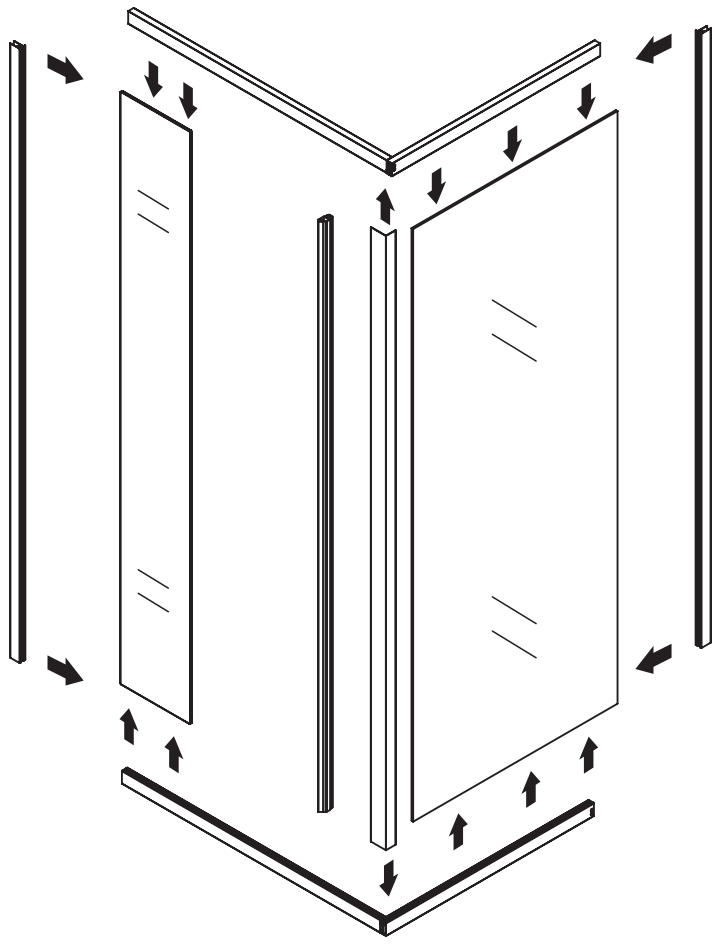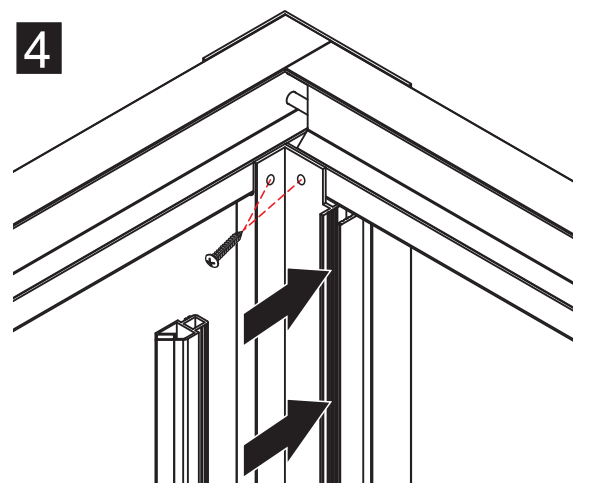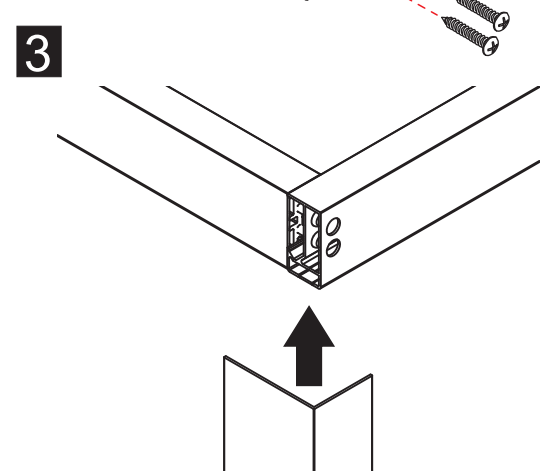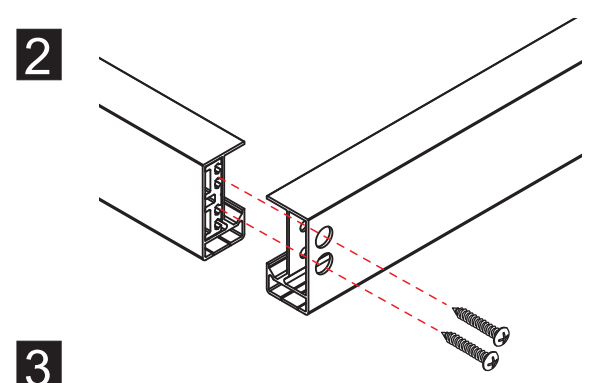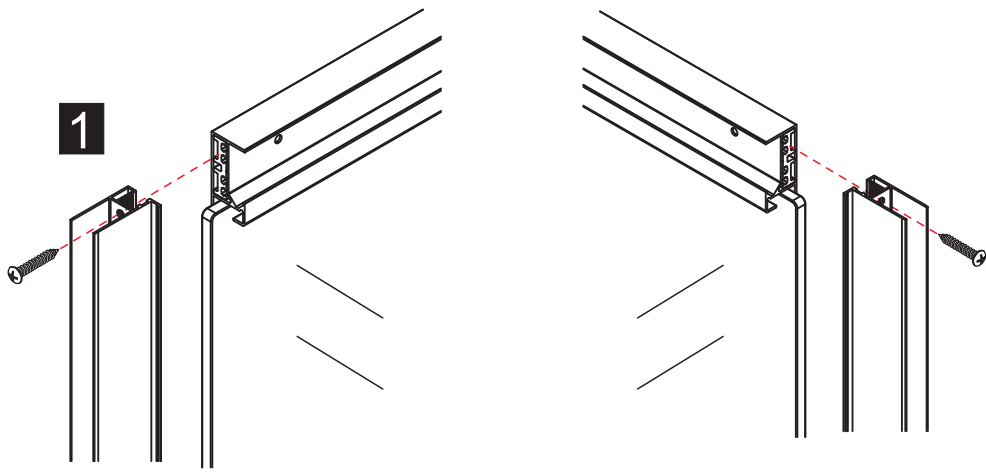



1

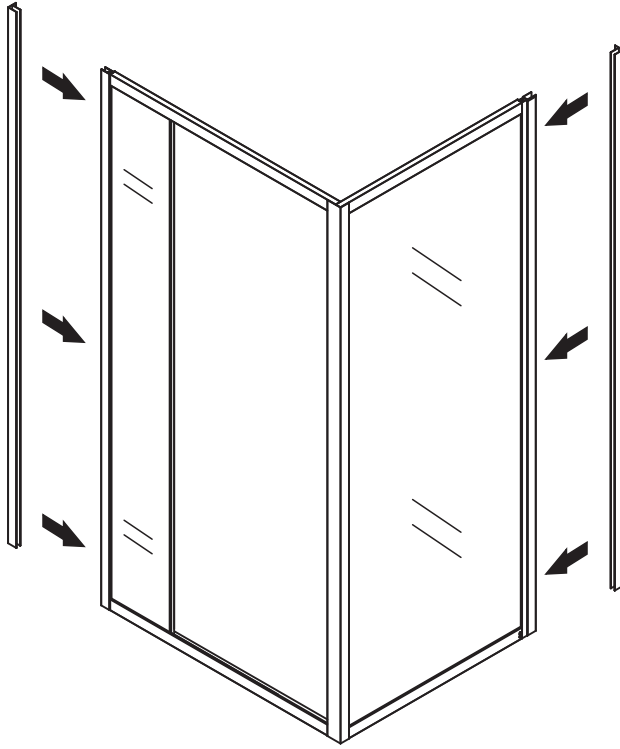


2

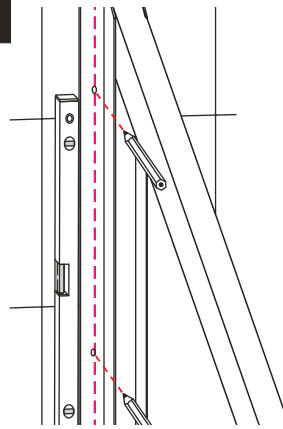


3


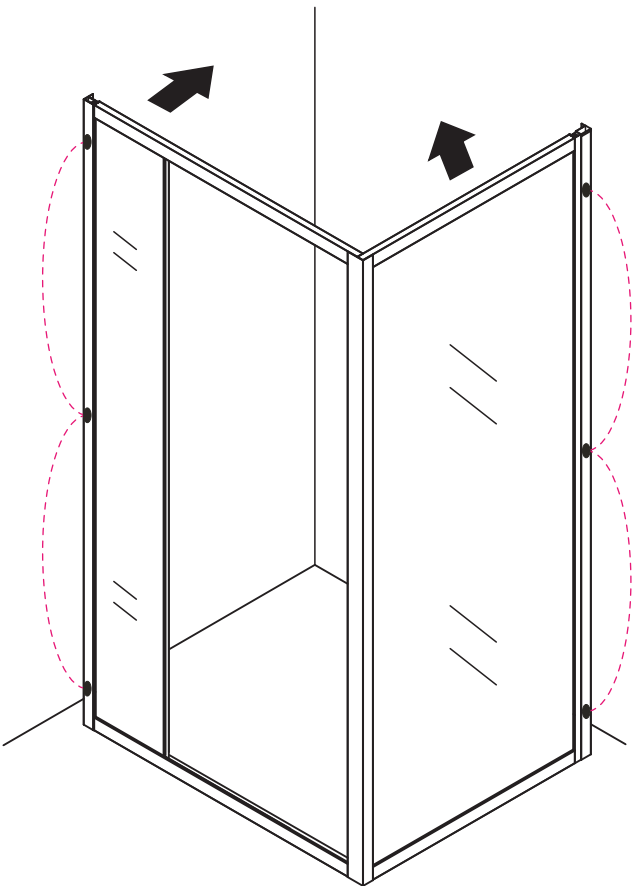
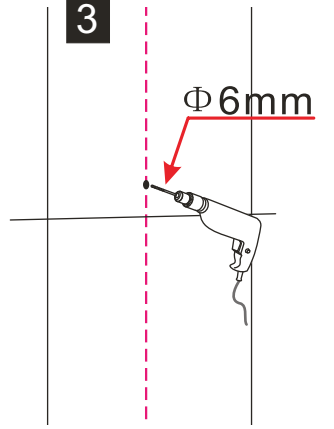







4

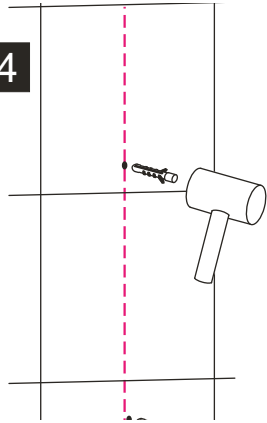


5

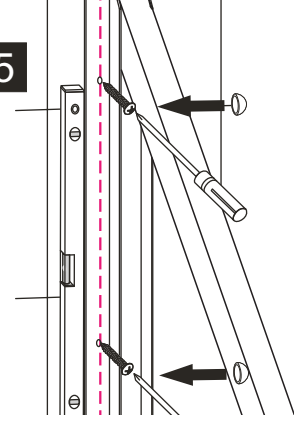

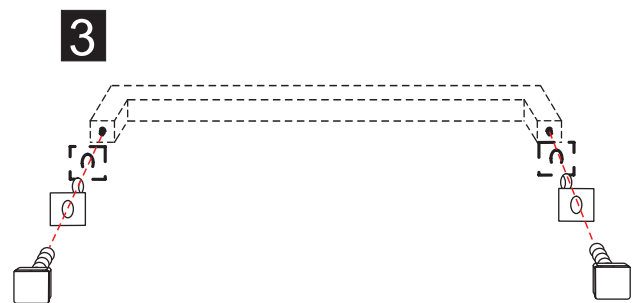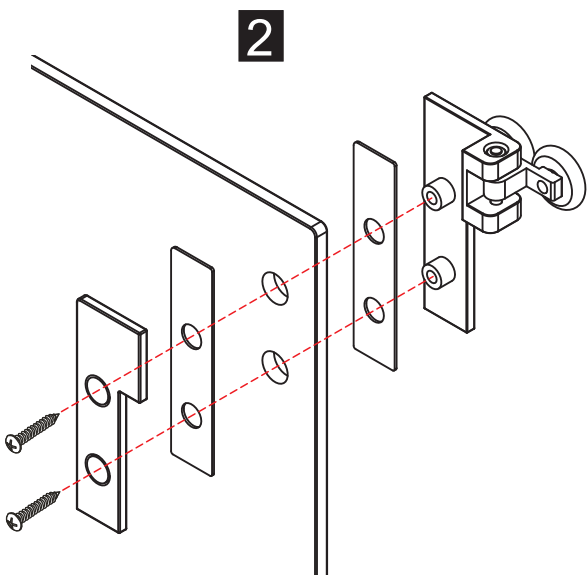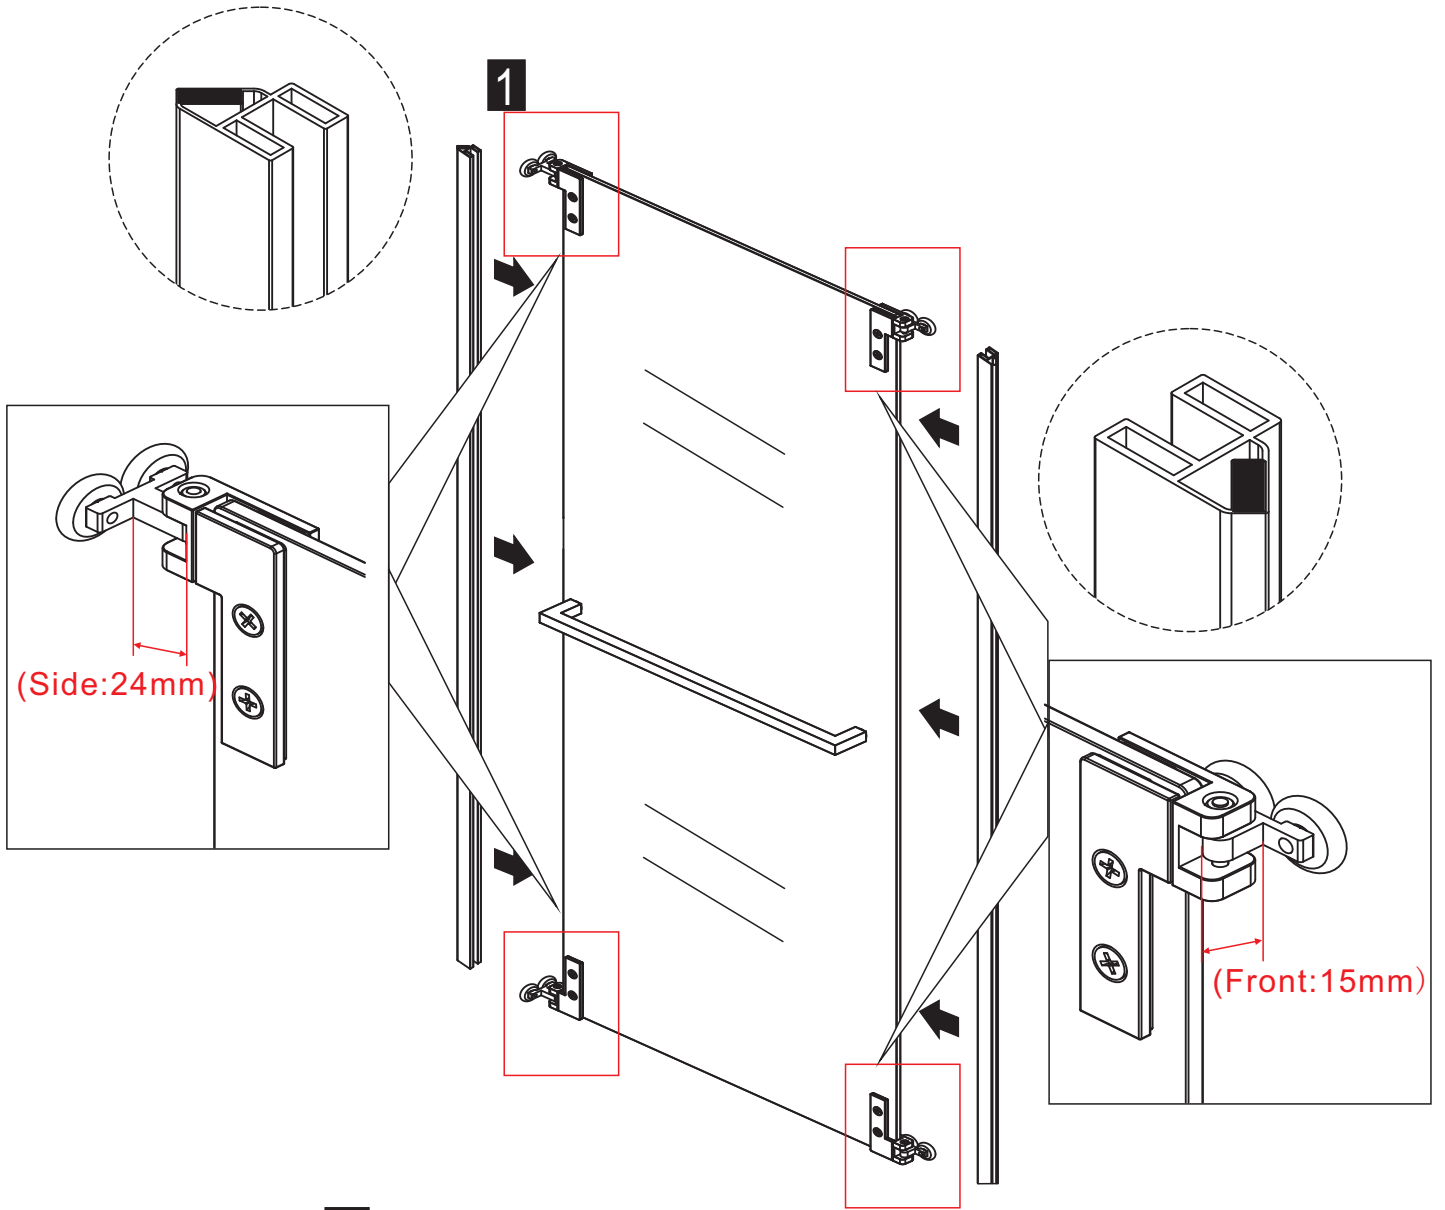


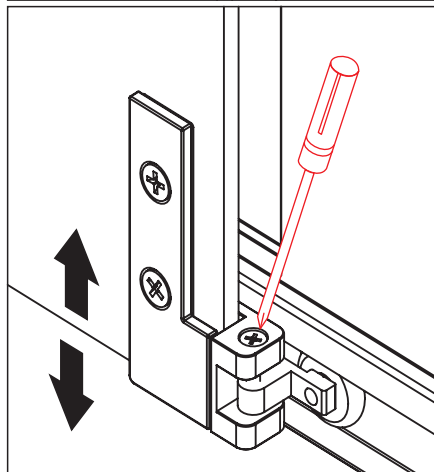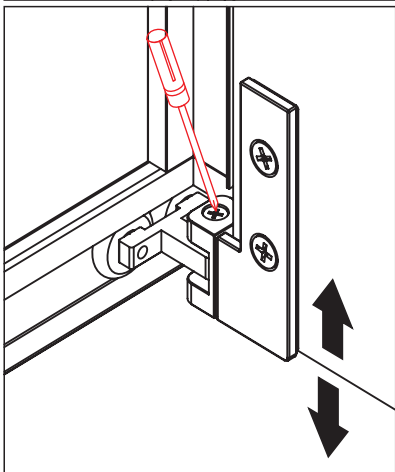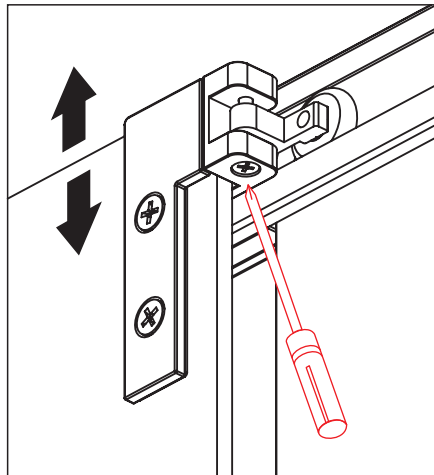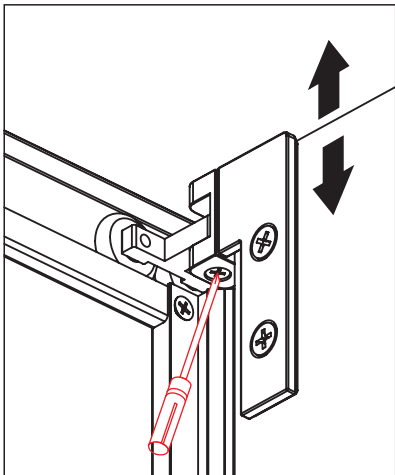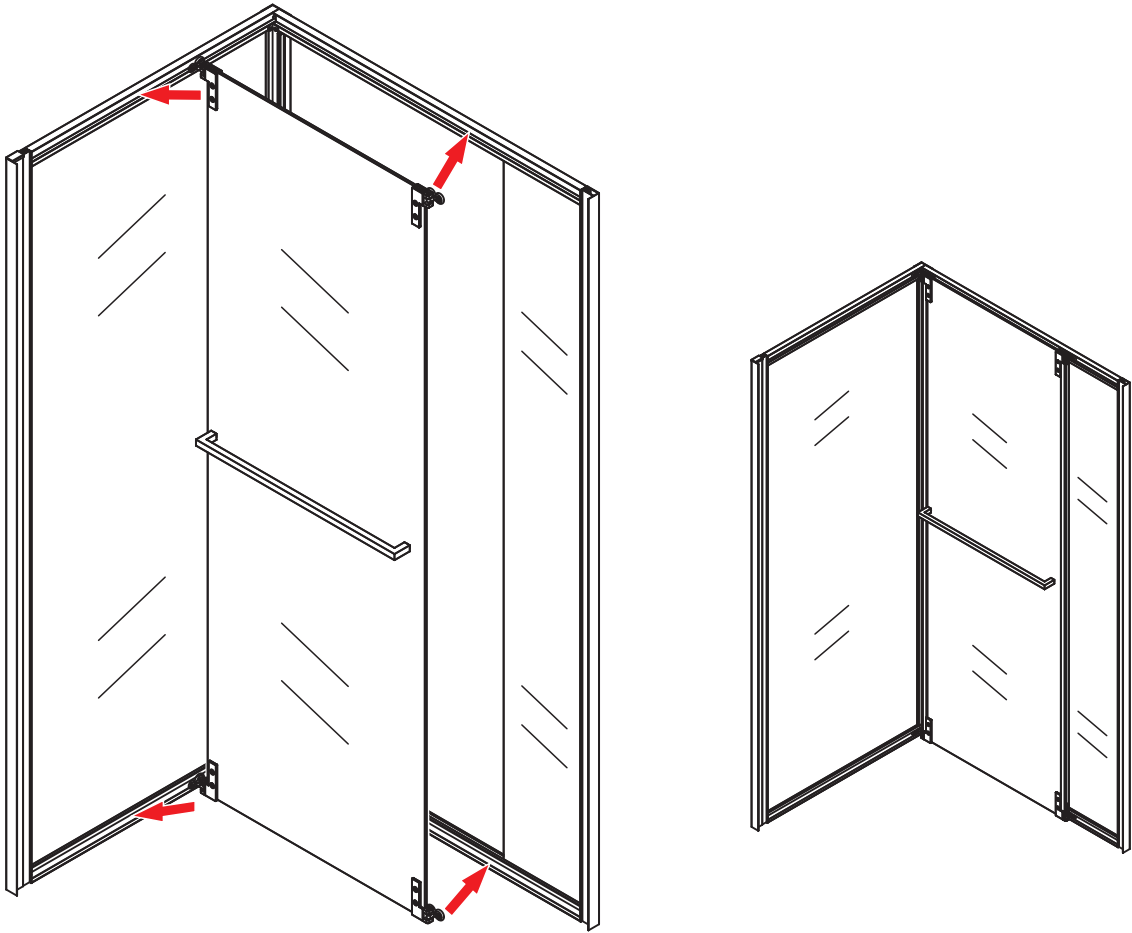

1

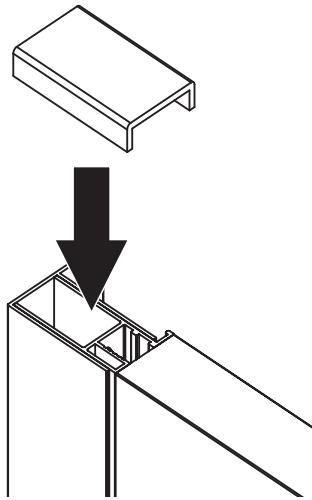

2

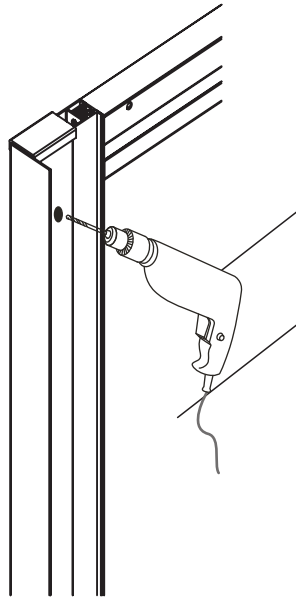

3

